

SC/APC Pushable

Connector Body Kit supplied separately to be installed in the field after cable installation


1- Remove the pulling cap.



2 - Slide the boot on as shown in the picture.



3- Align the keys on the connector body and the ferrule:
Match the green mark on the white body with the mark on the metal ring.

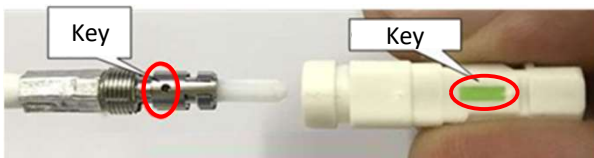

4- Push the white body onto the ferrule in the correct position, then immediately place the dust cap.




5- Insert the U-shaped metal clip to lock the white body and ferrule in place.



6- Push the boot into its final position as shown in the picture.



7- Align the keys on the white body and SC housing, then insert.

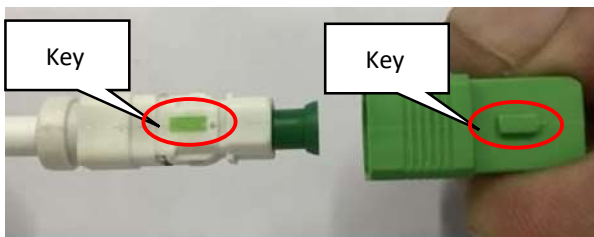

8- The final assembly should look like the picture shown



All drawings, designs, specifications, plans and particulars of weights, size and dimensions contained in the technical or commercial documentation of Aginode is indicative only and shall not be binding on Aginode or be treated as constituting a representation on the part of Aginode.

aginode.net